

Quick Start Guide for EcoView Outdoor TV




Your new weatherproof EcoView is designed for shaded / intermittent sunny areas only

Step 1

CHOOSING LOCATION

- DO NOT MOUNT display near heat source, above fireplace without 6" mantle between or within 12" or less from the ground. Ensure display has adequate ventilation.
- Read Sealoc warranty packet for additional important information.

POWERING YOUR TV

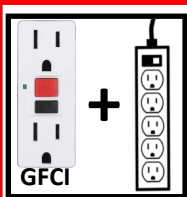


GFCI power outlet and surge protector is required. Failure to do so will immediately void your warranty.
NOTE: A standard power strip will not protect your Sealoc display from power surges.

NOTE: SEALOC DISPLAY FUNCTIONS

- Your Sealoc display functions as a monitor and will search for an active input source. If not found, it will go into sleep mode within ~20 seconds until an active video source is supplied.
- During installation / setup, ensure the A/V source is installed BEFORE powering up the display.
- The Sealoc display uses internal, multi-stage cooling fans. In a quiet environment the fans can be heard. During high heat situations, additional fans will assist with cooling and generate slightly more fan noise. This is a normal function and increases the life of the display.


Step 2

CAUTION HEAVY OBJECT




- 55" - 2 person lift
- 65" - 75" 3-4 person lift (Lay display box flat on ground, screen side up. Slide display carefully out of box before lifting)

MOUNTING DISPLAY

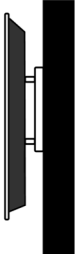

- Use outdoor rated mount only.
- Mount must be rated to support weight of display.
- Mount must be secured to surface with adequate fasteners to support the weight of the TV.
- Lubricate, clean and inspect mount regularly.

CABLE ROUTING IN MEDIA BAY

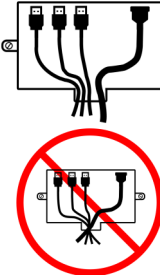


- Route cables side-by-side through bottom opening of media bay cover.
- Do not cross or stack wires on top of each other as this may prevent the media bay cover from providing a seal.
- Do NOT overtighten thumbscrews on media bay cover.

Step 3


CARE & MAINTENANCE

FILTER MAINTENANCE



- Your Sealoc display is equipped with one or more user-serviceable filters at the bottom of your display. Use a Phillips screwdriver to remove, clean and replace the air filter.
- High dust / pollution environments require filters to be cleaned at least once every 2-3 months.
- Filters should be removed and rinsed with clean, cool water once per year. Let dry completely and reinsert into display.
NEVER RUN DISPLAY WITH FILTER REMOVED.

Cleaning The Glass Screen




- Use a clean, dry, micro-fiber cloth to remove dust.
- If screen is particularly dirty, use standard glass cleaning products to clean the glass of your display such as Windex, SprayWay, etc. **NEVER USE ABRASIVE PRODUCTS OR HIGH PRESSURE WATER!**

Cleaning Your TV Display's Body

- Use mild, soapy water to gently clean the body of your display.
NEVER USE ABRASIVE PRODUCTS, SCOURING PADS OR CHEMICALS AS THIS WILL DAMAGE THE POWDER COATED SURFACE!

SCAN BELOW FOR TROUBLE-SHOOTING GUIDES AND USER MANUALS



Note: Please refer to the product user manual for important additional information regarding your display. Should you have any questions about the installation, use, care or maintenance of your Sealoc display, please contact us at support@sealoc.com or call us at 1(844) 4-SEALOC (1-844-473-2562.)